

ALMØ22

SQUID

SALMPLE

USER

GUIDE.



Introduction	3
Features -----	4
Technical Specifications-----	5
Operation	6
Panel Layout -----	6
Getting Started -----	7
Channel Parameters-----	8
Assigning CV Control-----	13
Channel Operations -----	13
Recording Samples-----	14
Saving & loading Banks -----	17
Key Combos-----	20
Patch Ideas	21
Limited Warranty	22
Support	23
APPENDIX	24
I. Calibration / System info-----	24
II. Firmware Updates -----	25
III. USB Support-----	25
IV. Included Sample Banks-----	26
VI. Thanks -----	26

Introduction

The 'Squid Salmples' is a Eurorack 8 channel audio & CV sampler. It is designed for immediate real time sampling, editing and mangling within a modular context.

Taking influence from early hardware samplers, The Squid Salmples focuses on usability & instinctive operation, incorporating a proven Pamela's Workout style user interface for minimal screen dependance & a fun, hands on experience.

With support for sampling and playback for both audio and CV, as well as CV control of all parameters, on-the-fly bank loading & saving to USB, The Squid Salmples brings a unique take on old school sampling into the modular realm

The Squid Salmples comes with a USB Stick containing approximately 90 banks of original carefully curated royalty free samples. This includes a wide range of sounds from classic drum machines & weird synths to field recordings & CV modulations. Banks are provided by both ALM and some of our favourite artists and friends including Mumdance, Solid Blake, Russell Haswell, Lauren Flax, Dave Burraston (NYZ), Sue Zuki, Dungeon Acid, Sasha Lewis and Andrew Duff.

Features


- 8 independent channels, 4 DC coupled outputs (2 channels per out) and a mix output (ac coupled)
- 1 mono record input handling both CV and audio input signal from line to modular level.
- Each channel has approx 11 seconds of 16 bit / 44.1Khz CD quality sample time stored in low latency RAM.
- Each channel can have various parameters edited all in real time; bit depth, rate, lo fi playback speed/pitch, amplitude level with a simple envelope, looping with crossfade, playback direction, start, end and loop 'cue' positions, multiple cue groups and more.
- Three CV inputs allow for CV control to be assigned to any & multiple parameters. Channels 6, 7 & 8 have dedicate 1v/oct input for control of pitch (expect crunchy aliasing!).
- Sample record and channel destination can be controlled either by automated patching or manually via UI controls.
- Save and load samples to USB keys as regular Wav format files arranged in quick-to-use banks of 8 (Up to 99 per key).
- Easy firmware update via USB key.
- Skiff friendly with reverse power protection.
- Made in England,

Technical Specifications

- Supply: +12V 300mA Max / -12v 35mA
- Size: 21 HP
- Depth: 38mm
- AKM audio codecs with 44.1khz / 16 bit quality audio (in & out)
- 1-2ms trigger response time
- Approx -75db noise floor.

Operation

Panel Layout

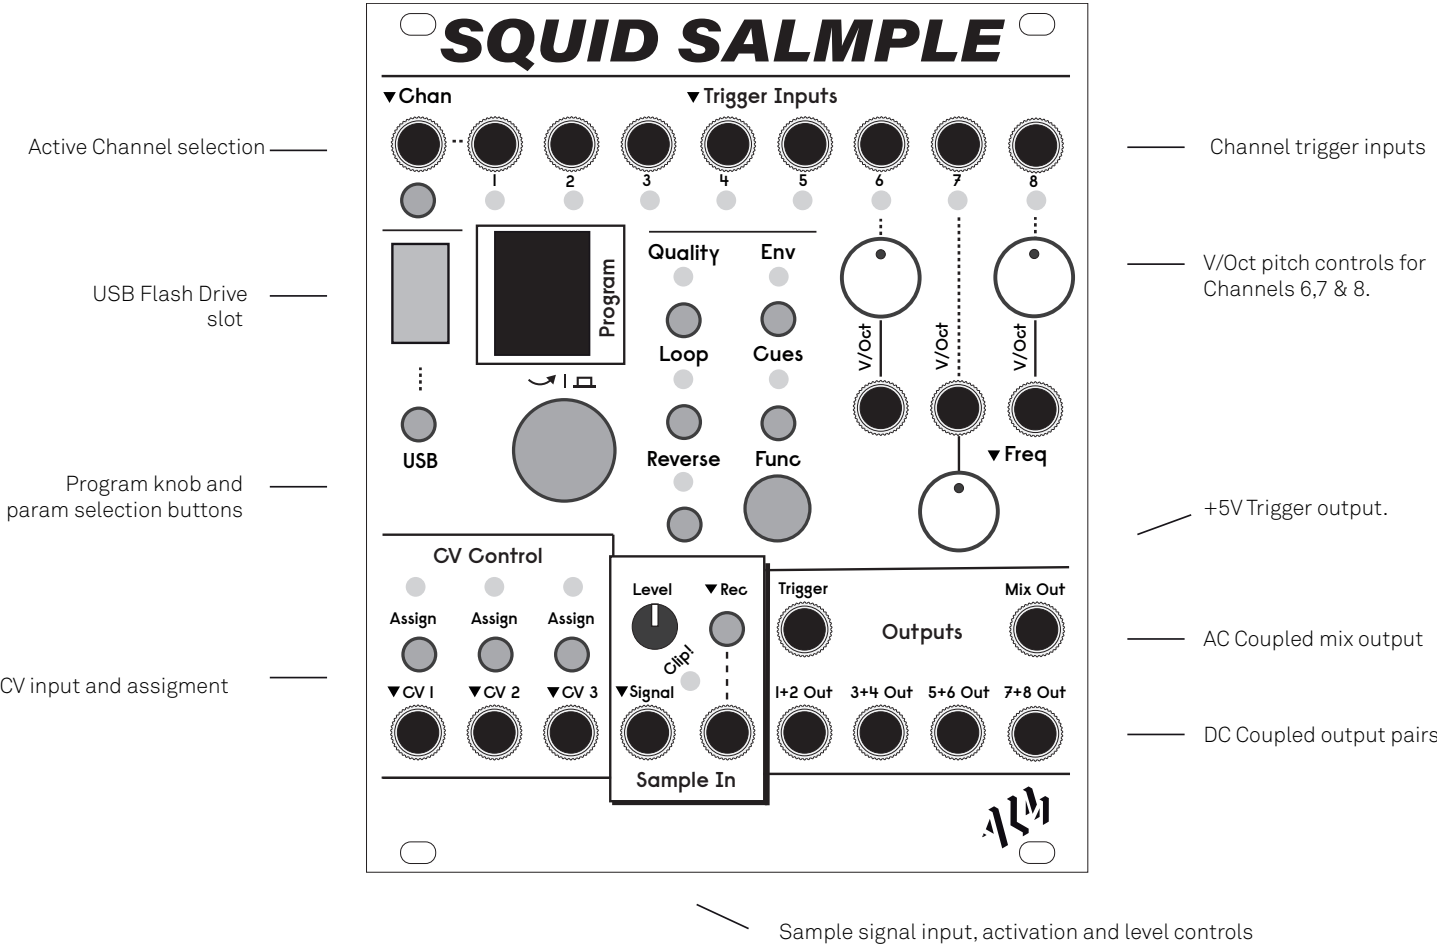

Getting Started

The Squid Salmples works with a bank of 8 independent samples each having their own channel and trigger input to initiate playback. Outputs are shared in both fixed pairs and all together via an AC coupled mix output. The panel allows for the user to quickly navigate between channels (via the program knob encoder or channel selection button), preview channel samples (click program knob) and edit various sample parameters (accessed via controls in centre and right of module). Many of these parameters can also have CV control assigned. There are also controls for populating channels either via loading from USB or via sampling an input signal.

The Salmples powers on to the channel selection screen. Firstly to load a sample bank, with the supplied usb stick inserted, press the USB button and then turn the program knob to select a bank, then click and select 'Load' from the menu clicking the program knob again. The bank's samples will load and then you will be returned to the channel screen.


To cycle through and select a different channel, press the 'Chan' button or turn the program control knob. Clicking the program control knob will play any sample loaded for the currently selected channel. You can also start a channel's sample playing by patching a trigger into its associated input. Playback will come from the mix output or the channel's associated pair output (a cable patched in here will remove from the mix output).

You can adjust various parameters for the current sample channel by repeatedly pressing one of the relevant blue buttons to cycle through related grouped parameters. Parameter values are then adjusted by turning the program knob. You can return to the channel screen by pressing the channel button. Parameter screens explained in next section.

Connect an audio source to the 'Signal' input and adjust the level control until just before the red 'clip' LED lights. Press 'rec' once to arm the sampler and then again to start sampling. Wait a few seconds and then press rec again to stop sampling. Press program knob to play back the sample. Press 'Cues' to see the waveform of your captured waveform. See the "recording Samples" section for more info on sampling.

Channel Parameters

This section covers editing parameters for the currently selected channel. You can select a channel via pressing the 'Chan' switch, cycling the encoder whilst the Channel screen is active or by patching a trigger into the Channel input.

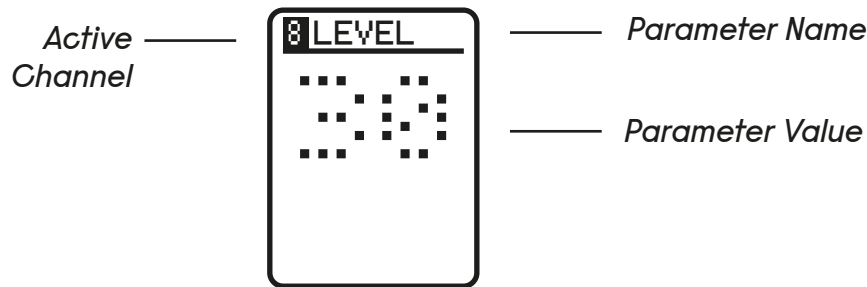

You can move to the same parameter screen but for another channel by holding the channel button down and turning the encoder.

Each of the blue button sections has the following parameters;

Quality - Bits

Adjust bit depth of played back sample.

Quality - Rate

Adjust the playback rate of the sample in khz.

Quality - Speed (not present on chans 6,7 & 8)

A linear playback speed control.

Holding *Func* whilst this screen is active will overlay a BPM value for the sample with the assumption its a bar (4 beats) in length and BPM thus fits 1-300.

Quality - Quant (only present on chans 6,7 & 8)

This is a basic quantisation control for the playback speed.

Possible settings are;

- 'NO' - No quantisation

ALM-Ø22 - 'Squid Sample'

- '12' - Quantisation to Chromatic 12 tones
- 'OT' - Full per octave quantisation - this is useful for easily matching original sample speed with controls.

Env - Level

Adjust the playback volume of a sample. At 50 is unity gain. below will attenuate, above increase.

Use this setting to avoid digital clipping when mixed. Value defaults to 30 as to conservatively avoid digital clipping.

Env - Decay

Add a simple decay envelope to the sample when set to greater than 99. FIXME

If a sample is set to loop the envelope will effect the loop as a whole (rather than single sample) with max decay time being 10 seconds.

Env - Attack

Add a simple attack envelope to the beginning of sample playback. Behaves similar to Decay if the sample is set to loop.

Env - E Trig

Fires a trigger when channel sample playback stops - this could be a 'virtual' trigger which can trigger another channel internal or a real one sent on the trigger output.

Loop - Loop

The arrow indicates the current looping mode for the sample. A single forward arrow indicates usual forward playback. An arrow with loop sample indicates basic looping between sample loop and end points.

Both back and forward arrows indicates 'zig zag' type looping where sample playback goes alternatively forwards then backwards between loop and end points.

ALM-Ø22 - 'Squid Salmples'

If 'GATE' is also displayed then the sample will only play & loop whilst the associated channels trigger input is held high (like a sustain). If Decay is set however, playback will move to this stage when the trigger goes low.


Loop - X-Fade

Adds a simple cross fade between the sample end and loop points as to smooth out loops.

Reverse - Reverse the sample.

Cues - Start, End & Loop

Set the samples start, end and loop points

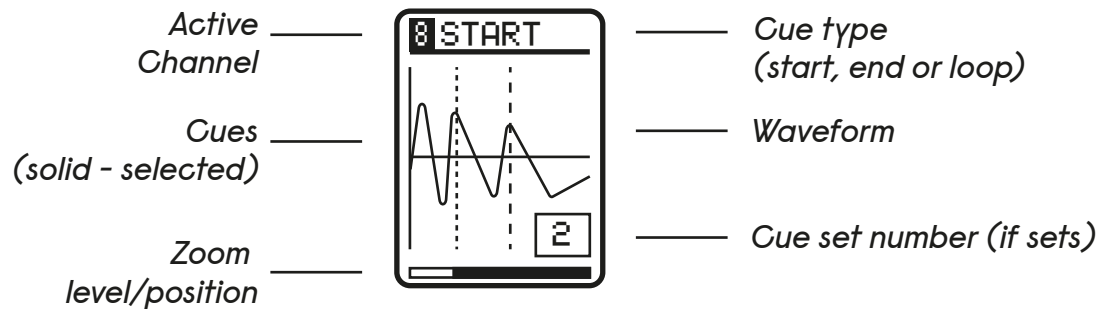

Repeatedly pressing the 'Cues' button will cycle between the channels samples start, end and loop 'cue' points - i.e. where sample playback begins, ends and loops.

Twist the program knob to adjust selected cue point. Hold *Func* and twist program knob to zoom in and out of the sample centred around the current cue point. How far the cue point moves will be dependent on zoom level and encoder acceleration.

The zoom level and position within the sample is indicated at the bottom of the display. At maximum zoom level the actual sample offset value (in samples) is also displayed.

Moving a start point beyond the loop point will also move the loop point forward. Bringing the end point behind the loop point will bring the loop point backwards.


ALM-022 - 'Squid Salmp'le'

Cue Sets

To access the Cue Sets screen, Hold '*Func*' and press the *Cues* button.

Cues Sets allow for multiple groups of Cue start, end and loop points to be used on the same sample. By then switching between different Cue Sets various playback effects are possible, the most obvious of which is chopping up a break beat.

Cues sets can be added direct by the Squid Salmp'le itself or via common audio editing software on your computer. Cue Sets can be switched via both CV, Trigger and direct control.

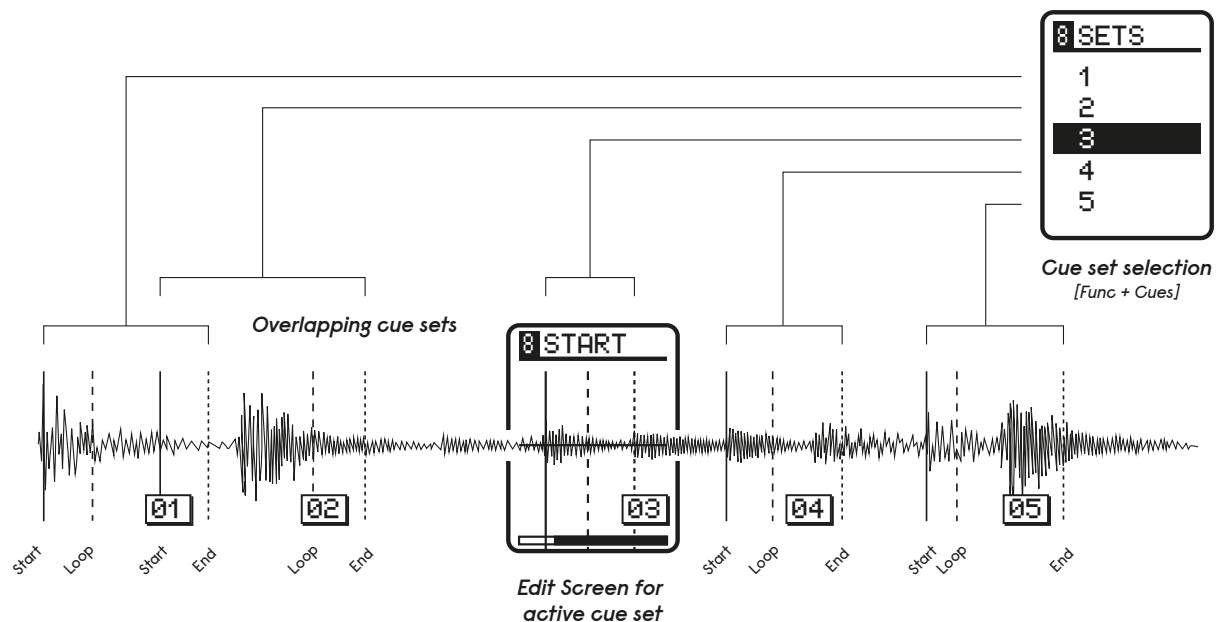

When accessing the Cue Sets screen (hold *Func* + press *Cues*) A small menu will appear of operations to add Cue Sets in various ways. If some Cue Sets already exist a list of these will also appear in this list. Once added, Cue sets can then made active and switched between here (or have CV control assigned).

Select 'Add' and click program knob to add a cue set. You can then select the new Cue Set (by scrolling up) and edit its start, loop and end points by switching back to the main Cues screens (press '*Cues*' button - the active cue is now shown in a small box). Any changes will be remembered.

To remove a Cue Set, in the Cue Sets screen with the set to be removed highlighted, Hold *Func* and click program knob to remove it.

ALM-Ø22 - 'Squid Sample'

To make cue a set active simply turn program knob to select its number. If sample is currently playing or recording it will be queued up for next triggered playback otherwise it will change immediately.

CV can be assigned (see next section) so the active Cue Set selection above is CV controlled.

The Random and Step options in the Cue list can also be made active when selected. Random will jump to a make a random Cue Set active when the channel is triggered whilst Step will step to the next one (or first if at end of list).

The Split and Auto options create Cue Set more intelligently.

Select 'Split' to cut all sets into equal halves (useful for quickly cutting up loops etc). 'Random', if selected, will jump to a random cue set when ever a trigger is received for the channel.

'Auto' will attempt to create Cue Sets automatically by detecting transients and zero crossings on the original sample. It works best of source material that has obvious transients. Note this function will delete any existing cue sets even if no new ones are found. If no Cues are found check for DC offsets (see calibration appendix) or a high noise floor confusing the zero crossing detection.

Note If a Wav file has markers (aka cue points, pre-added in desktop audio editing software) set on it these will automatically get imported and converted into cue sets when the wav file is loaded. A program like 'Ocen Audio' (free for Mac & PC) can be

V/Oct knob controls

Channels 6, 7 & 8 have a dedicated v/oct control and input.

When the pitch roughly matches the original sample speed a 'tuning fork' icon will be displayed on the channel screen. To match precisely the original sampling speed use the 'Quant' parameter under Quality.

Expect only 2-3 octaves of rough tracking with deliberate 'lo fi' sample and hold style pitching (leading to crunchiness but artefacts & aliasing sometimes obviously present on 'purer' sounds. Run through a filter to clean to taste.)

Assigning CV Control

CV control can be assigned to any of the above parameters. There are 3 CV inputs on the lower left of the module. CV inputs respond to voltages between 0 and 5v. Voltages input outside of this range are safe but will be ignored.

With a parameter screen active that you want to assign to CV control, press the relevant CV assign button. You can digitally adjust attenuation and offset for that assignment by pressing *Func* + *assign* button for that CV input.

CV control of Reverse is a slightly different mapping. To assign/un-assign CV to reverse, press & hold *Reverse* and the selected *assign* button.


Channel Operations

As well as displaying the currently selected channel number, the screen also can display some other info and perform some useful operations.

Channels 6, 7 & 8 will display a small 'tuning fork' icon if the frequency of the sample is set close to the original sampling frequency (note: use Quant option for precise matching).

If the Channel is set to reference the sample data of another channel - in which case the referenced channel number is displayed to the right of the main channel number. The referenced Channel can be set via holding 'Chan' button and turning program knob.

A 'Cx' will be displayed to the left of the channel number if set to 'Choke' another channel - 'x' being the Channel. You can set this by holding down the 'Chan', then the 'Env' Button and then turn the program knob.

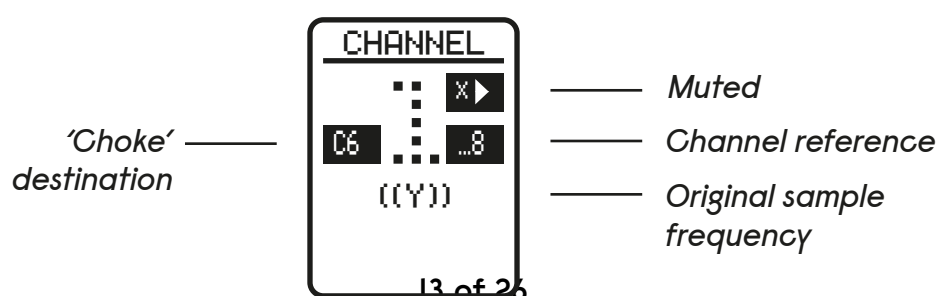

Pressing *FUNC* + *Env* will Mute a channel. Pressing *Chan* + *FUNC* + *Env* will Solo a channel. Press again to un-solo. Multiple channels can be solo'd (un-solo all to return to normal state). These features can be very useful in a live performance.


Recording Samples

Samples are recorded into the current selected channel. Max sample time per channel is 11 seconds. Quality is fixed at 16 bit 44.1khz mono. The recorded audio can be set to overwrite, overdub or extend the sampled audio currently stored in the channel buffer.

Audio as well as CV can be recorded but can be tricky to precisely match levels (for v/oct type sequences for example).

You can input anything from line level to modular level.


With an audio source connected (modular or line level) to the 'signal' input adjust thumb 'level' knob to just avoid clipping (red LED will light). Arm sampler by pressing 'Rec' record button. Display will indicate sampler armed and ready. Press record again to begin recording. The Display will show level and elapsed sample time. Press the record button again to stop sampling. The channel will now contain this new sample.

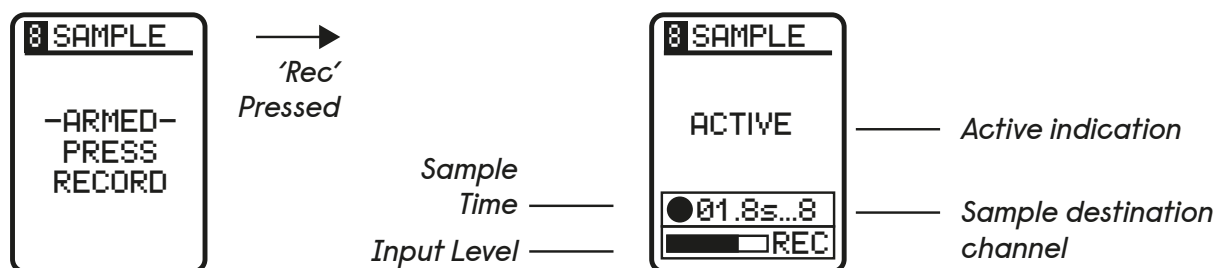

When starting recording a sample a gate will be emitted from the 'Trigger' output (high whilst recording active). This can be used when sampling drum type modules which are trigger activated.

ALM-022 - 'Squid Salmples'

Note: You can audition (preview) the input source by pressing - *Func* + *Rec* button to enable monitoring of the sample input. The monitored audio can be heard out of output number 8 (and mix output unless 8 is patched out).

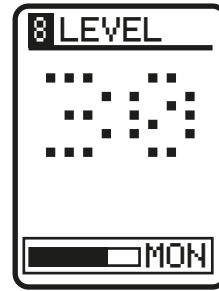

———— *Input level*

Sampling can be automated by patching a trigger into the jack below the 'Rec' button as to initiate sampling.

The length of the trigger into the 'Rec' input defines how recording behaves. A short (< 500 ms) trigger will enable an internal envelope follower which will keep sampling until the signal source appears to drop to zero. Triggers longer than 500ms this be treated as a gate with the recording continuing whilst the trigger is high. if the maximum sample time is reached the sample will loop back back to the beginning. Either recording type can also be stopped manually by pressing the record button.

The destination channel can be controlled by a trigger patched into the Chan input. A trigger signal will step through the active Chan.

You can 'lock' the destination channel for all recording by holding *Chan* and pressing *Rec*. Press again to toggle. The Sample arming screen will show if this is set.

Two other recording modes; 'Overdub' and 'Extend' are available as an alternate to the default 'Replace' mode. These can be set from the main Sample screen by turning the Program encoder to cycle between .

Overdub records on top of any existing sample data with the underlying audio having its volume reduced by -3db (50%).

Overdub will not clear any cue sets (unlike 'Replace') but will set the first one to the start/end points of the current overdubbed recording.

'Extend' will add recorded audio to the end of the channels recorded audio. It will also automatically add a cue set for the newly recorded sample. If Extend reaches

ALM-022 - 'Squid Sample'


the end of the sample buffer (i.e past 11 seconds) it will not record anymore. You can clear by switching back to 'replace' mode.

The more advanced features above allow for the squid to be used for much more than a basic sampler - anything from automated bank creation to using the Squid as a flexible digital delay and/or audio and CV processor. Please see the 'ALM TV' youtube channel for videos exploring this.

Saving & loading Banks

Samples are saved as .wav files to a USB stick. They follow a custom but simple directory structure and naming convention which allows 99 banks of 8 samples per usb key.


Sample banks exist within an /alm022 directory on the root of the USB stick. Within this are numbered sub directories for each bank - named 'Bank 1'..'Bank 99' etc. Within each bank directory are up to 8 wav files named chan-00X.wav with X being the channel number. There is also an optional 'info.txt' text file which contains the bank name (First 8 ascii characters of file).

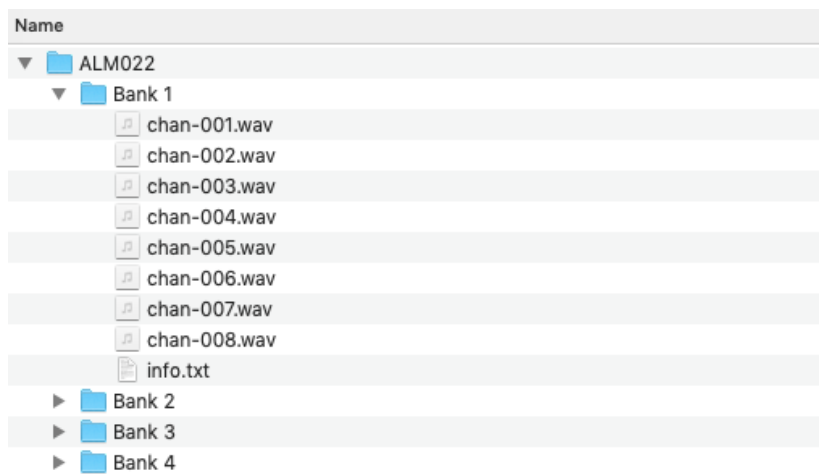

Following this naming convention, you can manually add your own samples, just make sure they are 16 bit and 44.1 khz Otherwise they will be ignored. Stereo samples become / treated as mono.

ALM-022 - 'Squid Salmples'

With USB stick plugged into front of the unit (on initial insertion you will need to wait a few seconds for the stick to be registered - a small window will 'pop up' indicating initial USB access), Press the 'USB' button to access the initial USB screen. Use the program knob to select a bank and then click the program knob to select an operation to perform.

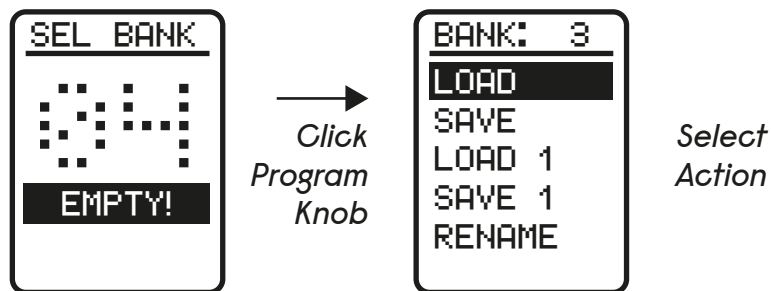

You can then perform one of the following options;

LOAD

Load a complete bank into ram.

SAVE

Save your current channel set up as a bank (potentially overwriting!). Parameter data, cv settings etc will be saved with the Wav files as custom metadata.

LOAD 1

Load a single channel from a bank. Select the channel number from selected bank. It will be loaded into the currently active channel slot. Note you can preview a single sample by holding *Func* and clicking the encoder.

SAVE 1

Save currently active single channel to a bank. Select the destination channel number.

RENAME

Rename a bank. Use program knob to select characters. Press USB button to commit the name, any other to abort operation.

ALM-Ø22 - 'Squid Salmples'

Important notes regarding USB operation;

- Loading/saving can be slow but playback / triggering on the sampler will continue whilst this process occurs allows banks to change 'on the fly'
- Saved files will get clipped from their start to end points. (if cue sets are used, then clip will be at the min/max cue)
- Loading wavs that are too long will just get clipped at maximum sample length.
- Wav files saved from the sampler contain Squid Salmples specific metadata which includes the various panel settings etc for the individual samples.
- The sampler will remember the last bank loaded per usb stick and attempt to load when powered on.
- You can press USB button to go back a menu. Press 'Chan' or any parameter button to exit USB screen
- Recording will be disabled whilst the USB screen is active.
- See Appendix 3 for info on supported USB sticks.
- USB button goes back up menus (i.e to exit rename)

!!DO NOT PLUG ANYTHING OTHER THAN USB FLASH DRIVES INTO THE USB PORT!!

Key Combos

Various useful key combos for power-user functionality;

- From a parameter screen, to quickly switch to the same parameter but for another channel, hold *Chan* button down and turn program knob.
- From a parameter screen, to change the selected parameter for ALL channels (to the SAME value), Hold *Chan* & *Func* down & turn program knob.
- To swap two channels Hold *Chan* down, turn program knob to channel you want to swap with and press *Func*.
- To have a sample bank reference sample data of another; Hold *Chan* down, turn program knob to selected referenced channel (the referenced channel is shown to the right on the channel number)
- To have a Channel 'Choke' another (stop playing when it starts) Hold *Chan*, then hold *Env* and turn program knob to reference other channel (A 'c<num>' is displayed on the channel screen indicating what its choking)
- To send trigger out of Trigger output without enabling sampling Hold *Func* + click program knob
- To 'audition' / monitor audio input; Hold *Func* + press *Rec* to toggle - monitored audio is sent to output 8.
- To quickly mute a channel press *Func* + *Env* . To Solo press *Chan* + *Func* + *Env*.
- To access 'cue sets': Hold *Func* + click *Cues*. *Func* + program knob click deletes a cue
- To lock the destination recording channel hold *Chan* and press *Rec*

Patch Ideas

Synced Cue Sets

With a channel containing beat aligned cue sets, assign a synced (to the original samples BPM) waveform type output (i.e from Pamelas New Workout) to a CV input assigned to select the active cue set. Also make sure the channel input is triggered by a beat trigger that is a factor of the original BPM.

The included 303 loops samples work very well for this.

Poor Mans delay

1. Increase end cue position of sample.
2. Set sample to loop sample
3. Adjust decay to taste.

Experiment with CV control of loop/end point. Reverse and Zig Zag loop types.

Complex CV modulation source

Sample a basic LFO source whilst manually modulating available LFO params (i.e frequency / shape) . Add cue sets to the sample together with an active loop. Via trigger input and voltage control of active cue set you have a complex controllable modulation source that can also be beat synced (reset) via the trigger input.

Sampling and modified playback of CV opens up a lot of possibilities. For example use bit depth as a kind of quantisation effect.


Limited Warranty

From the date of manufacture this device is guaranteed for a period of 2 years against any manufacturing or material defects. Any such defects will be repaired or replaced at the discretion of ALM. This does not apply to;

- Physical damage arising from mis-treating (i.e. dropping, submerging etc).
- Damage caused by incorrect power connections.
- Overexposure to heat or direct sunlight.
- Damage caused by inappropriate or mis-use.
- Use of incorrect or non-official firmware

No responsibility is implied or accepted for harm to person or apparatus caused through operation of this product.


By using this product you agree to these terms.

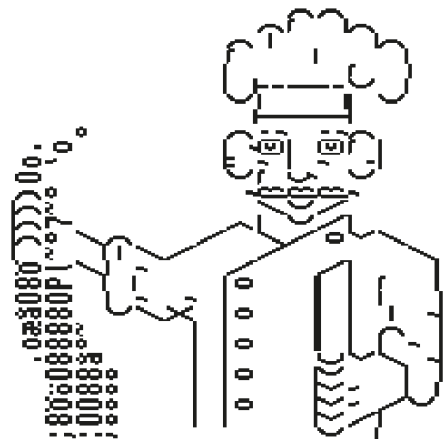

Support

For the latest news, additional info, downloads and firmware updates please visit the ALM website at <http://busycircuits.com> and follow @busycircuits on twitter.

Questions? email help@busycircuits.com .

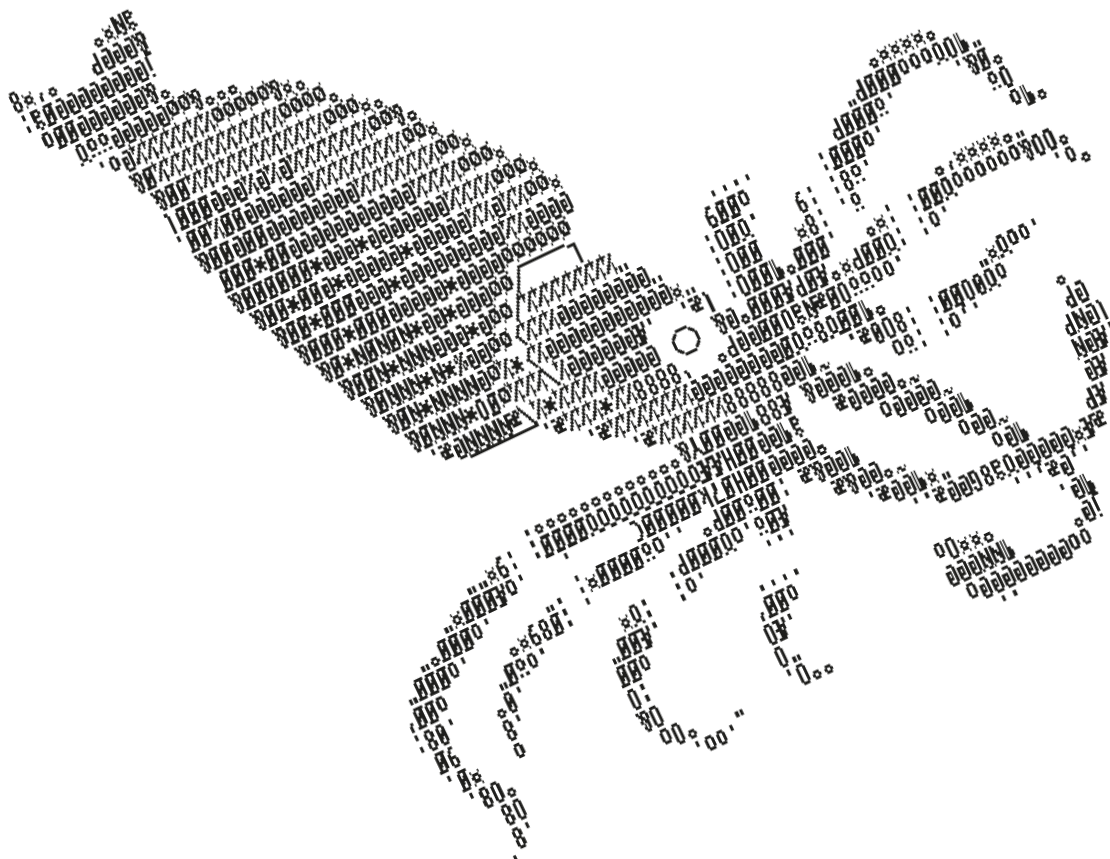

APPENDIX

I. Calibration / System info

Sampling input and outputs can be calibrated to remove slight DC offsets. Module should come calibrated from factory. Press *Func* + *USB* to access 'System' screen.

The 'V' row show the current installed firmware version.

The 'S' row shows the current sample input dc offset (can be +/-)

The 'A' row shows the current sample output dc offset (can be +/-)

The DC offset values can be adjusted via turning the program knob. Either value can be selected by clicking the program knob. Any other button will exit the system screen and save the config (there will be a pause).

To calibrate;

1. Power on module with no usb key inserted and nothing patched into module.
2. Patch '7+8 Out' to a good multimeter, or oscilloscope etc - something that will show 0v with good precision.
3. Select and adjust 'A' row value using the encoder so 7+8 output reads 0v (Expect value around -2000)
4. Now press '*Func* + *Rec*' to enable audio monitoring. The level of '7+8 Out' should change from 0V again.
5. Select and adjust 'S' row value (click program) so multimeter etc again reads 0v. (Expect value around -200)
6. Exit the menu by pressing Chan button (or other). Device should pause for a second or two whilst config is saved

(Note: if you hold *Func* whilst turning encoder values will increase by +/- 100)

II. Firmware Updates

Put supplied alm022-fw.bin on root of USB stick. Power on with *Func* button held down and release after a few seconds. Display will stay blank for a second and then 'Update' will be displayed together with a progress bar (which will flash rapidly). Wait for update process to complete and unit will reboot.

If the display stays blank, its likely either the USB stick is not recognised (try removing and re-inserting USB stick, or a different stick) or firmware file is not found (check name and is located in root i.e top directory of stick).

Please use only official firmware files when made available from the BusyCircuits website.

III. USB Support

It is possible that issues occur with certain USB flash drives - it could be that they fail to be recognised or in some rare cases lock up the unit (removing the key usually unlocks).

The following USB flash drives are known to work.. Generally go for drives which explicitly state USB2.0 support and are made by a well known manufacturer. Watch out for fakes!

- SanDisk Cruzer Fit 16GB
- SanDisk Ultra USB 3.0 / 64 GB
- Kingston Technology DTSE9 16GB & 8GB (32GB SE9 G2 does not work)
- Kingston DT micro 3.1 16GB
- Kingston Datatraveler 100 G3 16GB
- Integral Micro Fusion 8Gb
- Integral Metal Fusion 16Gb

!!DO NOT PLUG ANYTHING OTHER THAN USB FLASH DRIVES INTO THE USB PORT!!

IV. Included Sample Banks

The squid sample ships with 85 Banks of various sounds. See table [here](#) for details of each bank's contents and authors.

These banks are released into the public domain licensed under the Creative Commons CC0 License - see <https://creativecommons.org/publicdomain/zero/1.0/>

VI. Thanks

Thanks for Sasha Lewis for sound bank mastering, collation and documentation.

Thanks to Russell Haswell, Jack Adams, Sasha Lewis, Emma Blake, Lauren Flax, Andrew Duff, Dave Burraston, Alicia Matthews, Jean-Louis Huhta and Phil Bilsby for sample contributions, encouragement and beta testing.

Thanks to Heikki Lotvonen for Amiga ascii squid illustration.